


# Fire Hose Rack -- Installation Instructions

## **Instructions:**

**Step 1:** Layout rack uprights with the key holes facing in the correct direction (small notch facing down).

**Step 2:** Starting from the bottom, place a cradle in the front and back (2 per shelf needed) in keyholes 3 & 4 (counting up from the bottom).

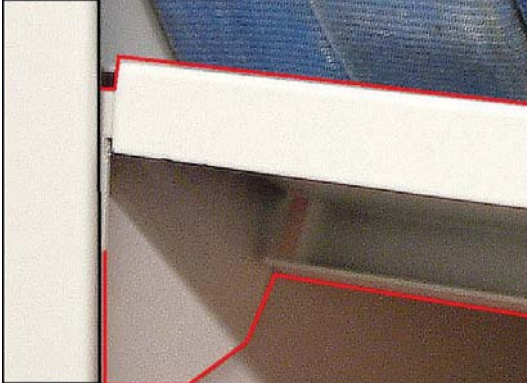

Upright (outlined in black)  
Cradle (outlined in red)

**Step 3:** Tap down cradles with a rubber mallet to set the support securely in place.

**Step 4:** The second set of cradles will occupy keyholes 19 & 20 (counting up from the bottom). Repeat 'Step 3' to secure cradle.

**Step 6:** The third set of cradles will occupy keyholes 35 & 36 (counting up from the bottom). Repeat 'Step 3' to secure cradle.

**Step 7:** Place regular shelf support (no cradle) in the top 2 keyholes of the upright. Secure supports and then place canopy shelf in place on top (dust cover).



## **Notes:**

A minimum of 25 inches is needed for to maintain correct spacing between hose rests.

The supports (two: one front and one back) are manufactured to cradle the coiled fire hoses.



SOUTHWEST **SOLUTIONS** GROUP  
*business organization systems*